


PARTS LIST:

ASSEMBLY INSTRUCTIONS FOR FUN4186 EVIL TRIPLETS
THIS IS NOT A TOY. 14+ AGE. PLEASE FOLLOW DIRECTIONS FOR EASY SET-UP.

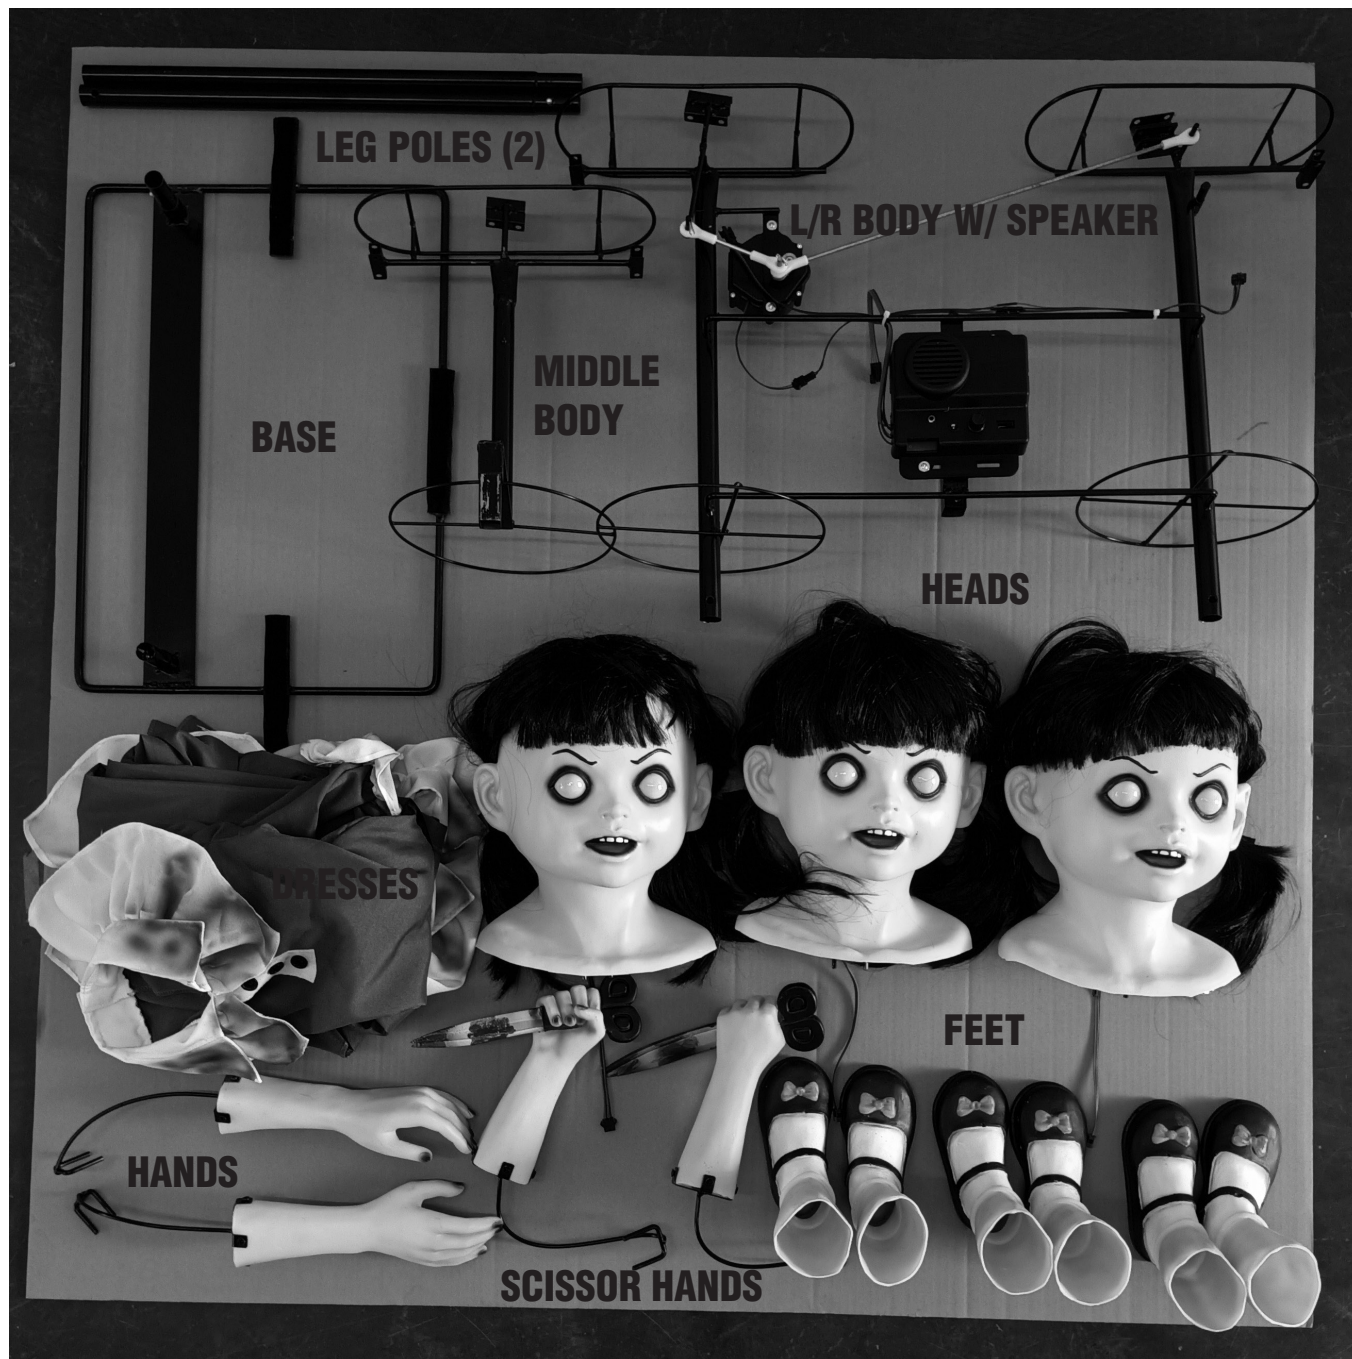


ONCE ASSEMBLED AND PLUGGED-IN, EVIL TRIPLETS WILL HAVE LIGHT-UP EYES, SIDE TO SIDE HEAD MOVEMENT AND AUDIO. ITEM WORKS WITH OR WITHOUT STEP-PAD. WHEN POWER SWITCH IS SET TO ON, EVIL TRIPLETS IS ACTIVATED BY SOUND SENSOR. TO ACTIVATE BY STEP-PAD, SET POWER SWITCH TO OFF. KNOB ON MODULE ADJUSTS VOLUME.

EVIL TRIPLETS WILL BE BUILT FROM THE FLOOR UP.


STEP 1

- Lay Base on floor, pegs in back.
- Connect Leg Poles to Base.
- Attach L/R Body to top of Leg Poles, speaker facing back.
- Connect Middle Body to front side of speaker box.

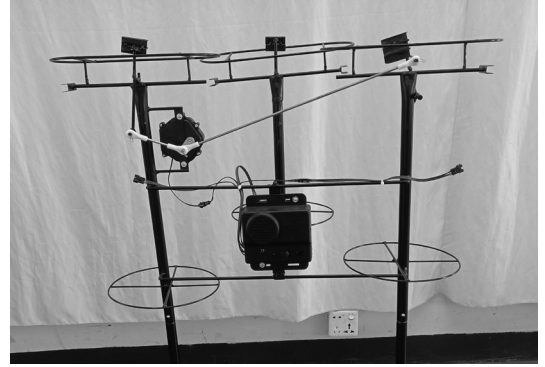

STEP 2

- Middle body dress has no hands sewn in. Drape dress over middle body frame, open side in back.
- Drape other 2 dresses over frames, sewn-in hands on inside.

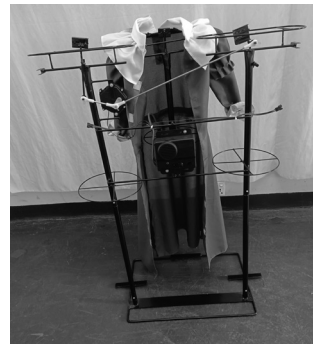

STEP 3

- Attach hands to shoulder frames by going up through sleeve. Scissor hands on outside of L/R bodies.
- Attach hands to middle body at either side of shoulder frame through sleeve.
- Attach heads to top of shoulder frames.
- Connect heads and speaker box wires.



STEP 4

- Connect Plug and Step Pad to speaker box, run wires out bottom of dress, close backs of dresses.
- Add feet to Velcro on base.
- Fold inner hands over middle body arms.

